


# NOVA LUCE

9236384

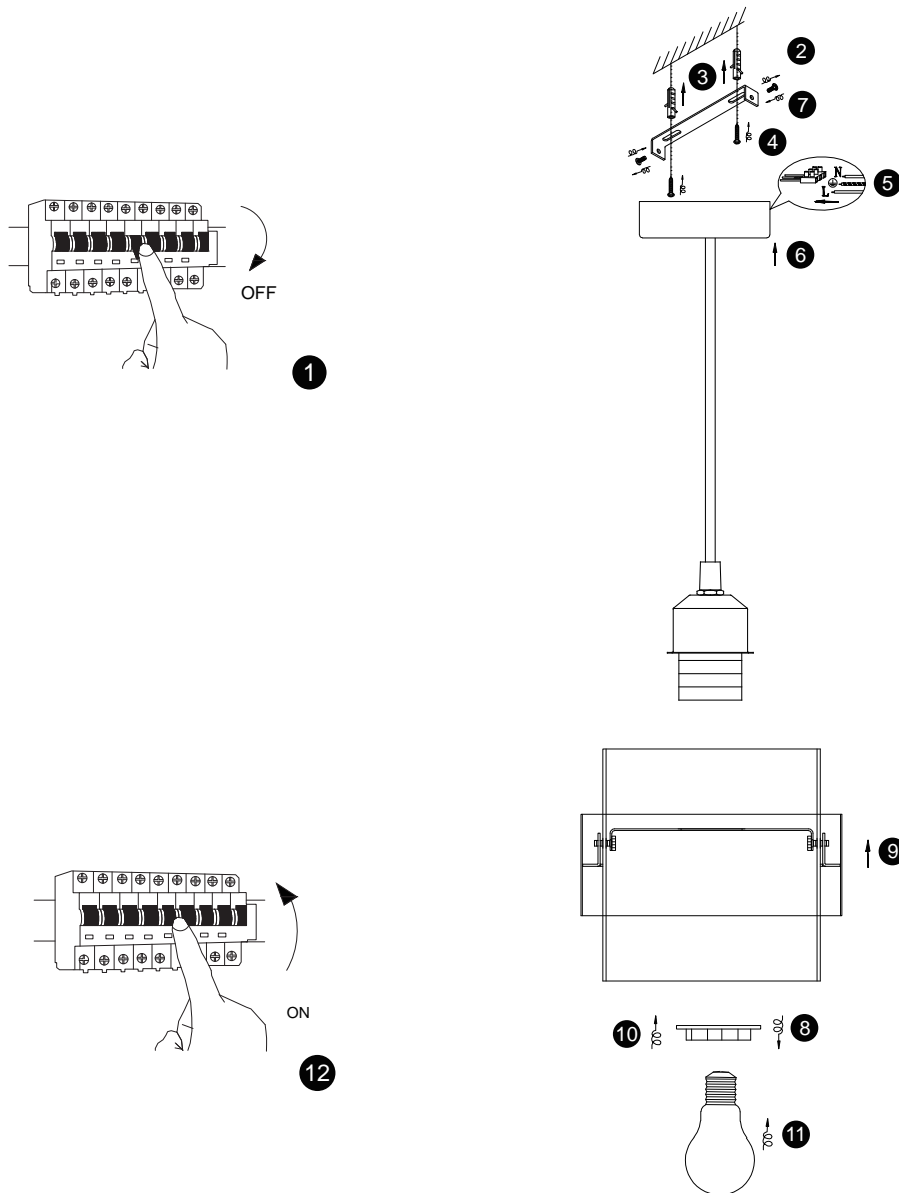

1. Turn on the general switch
2. Drill holes
3. Apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place

7. Apply side screws
8. By rotating untight the socket
9. Apply carefully the acrylic
10. Put the socket in place
11. Apply the bulb
12. Turn on general switch